

Information about the MicroSD Card

If you purchased the SD Card, you can ignore these instructions, but the idea is the same.



The little card is the microSD card, it goes in your GPS. The Big card is an adapter so you can use the little card in a standard card reader (use with computer).




This trusty (and well used) Garmin GPS Map 60Cx is used in this example.




The card for this model is located under the batteries, so flip the unit over and open the battery compartment (twist the metal D-Ring).




Remove the 2 AA batteries.

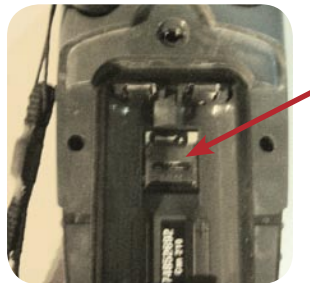

Slide the metal cover up and lift it up at the bottom (it's hinged towards the top).

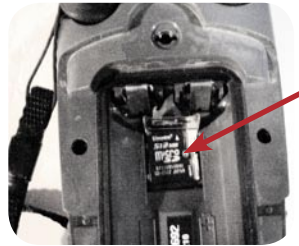

The card basically sits in the slot, sometimes it easier to flip the GPS over and let the card fall into your hand.

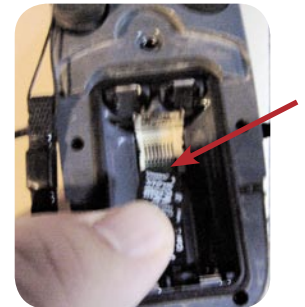

Put the new card in the unit, exposed metal contacts down or writing facing you. Reverse the process to finish.

The Card already has maps on it, you do not need to load the maps to use it.

Thank You!